

## Install a Locking Clip




**STEP 1:** Place the seat belt through the correct belt path on the car seat and buckle the seat belt. The seat belt webbing should be flat, not twisted.



**STEP 2:** Place your hand in the car seat and press the car seat firmly into the vehicle seat cushion while tightening the lap belt near the buckle.



**STEP 3:** Pinch and hold the lap and shoulder belts together near the latch plate.

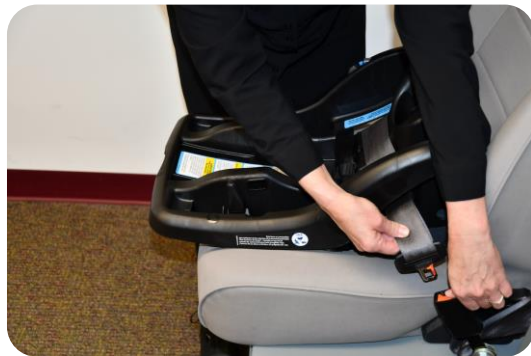

**STEP 4:** Unbuckle the seat belt while continuing to pinch the lap and shoulder belts together.



**STEP 5:** Thread the webbing of both the lap and shoulder belt portions of the seat belt through both sets of prongs on the locking clip.

- Refer to the car seat instruction manual for specific instructions on how to use a locking clip.
- Typically, a locking clip must be placed no more than 1 inch (2.5 cm) from the latch plate. Once the locking clip is threaded on the seat belt, the seat belt will remain at a fixed length.



**STEP 6:** Re-route the locked seat belt webbing through the car seat belt path. Press the car seat firmly into the vehicle seat cushion and buckle the seat belt.



**STEP 7:** Make sure the car seat moves less than 1 inch (2.5 cm) side-to-side or front-to-back when pulling or pushing at the belt path using moderate force. If the car seat moves more than 1 inch (2.5 cm) in any direction, uninstall the car seat and repeat the process of installing a locking clip.



**STEP 8:** To remove the locking clip, unbuckle the seat belt and pinch the seat belt webbing in half.