


What Locks a Seat Belt

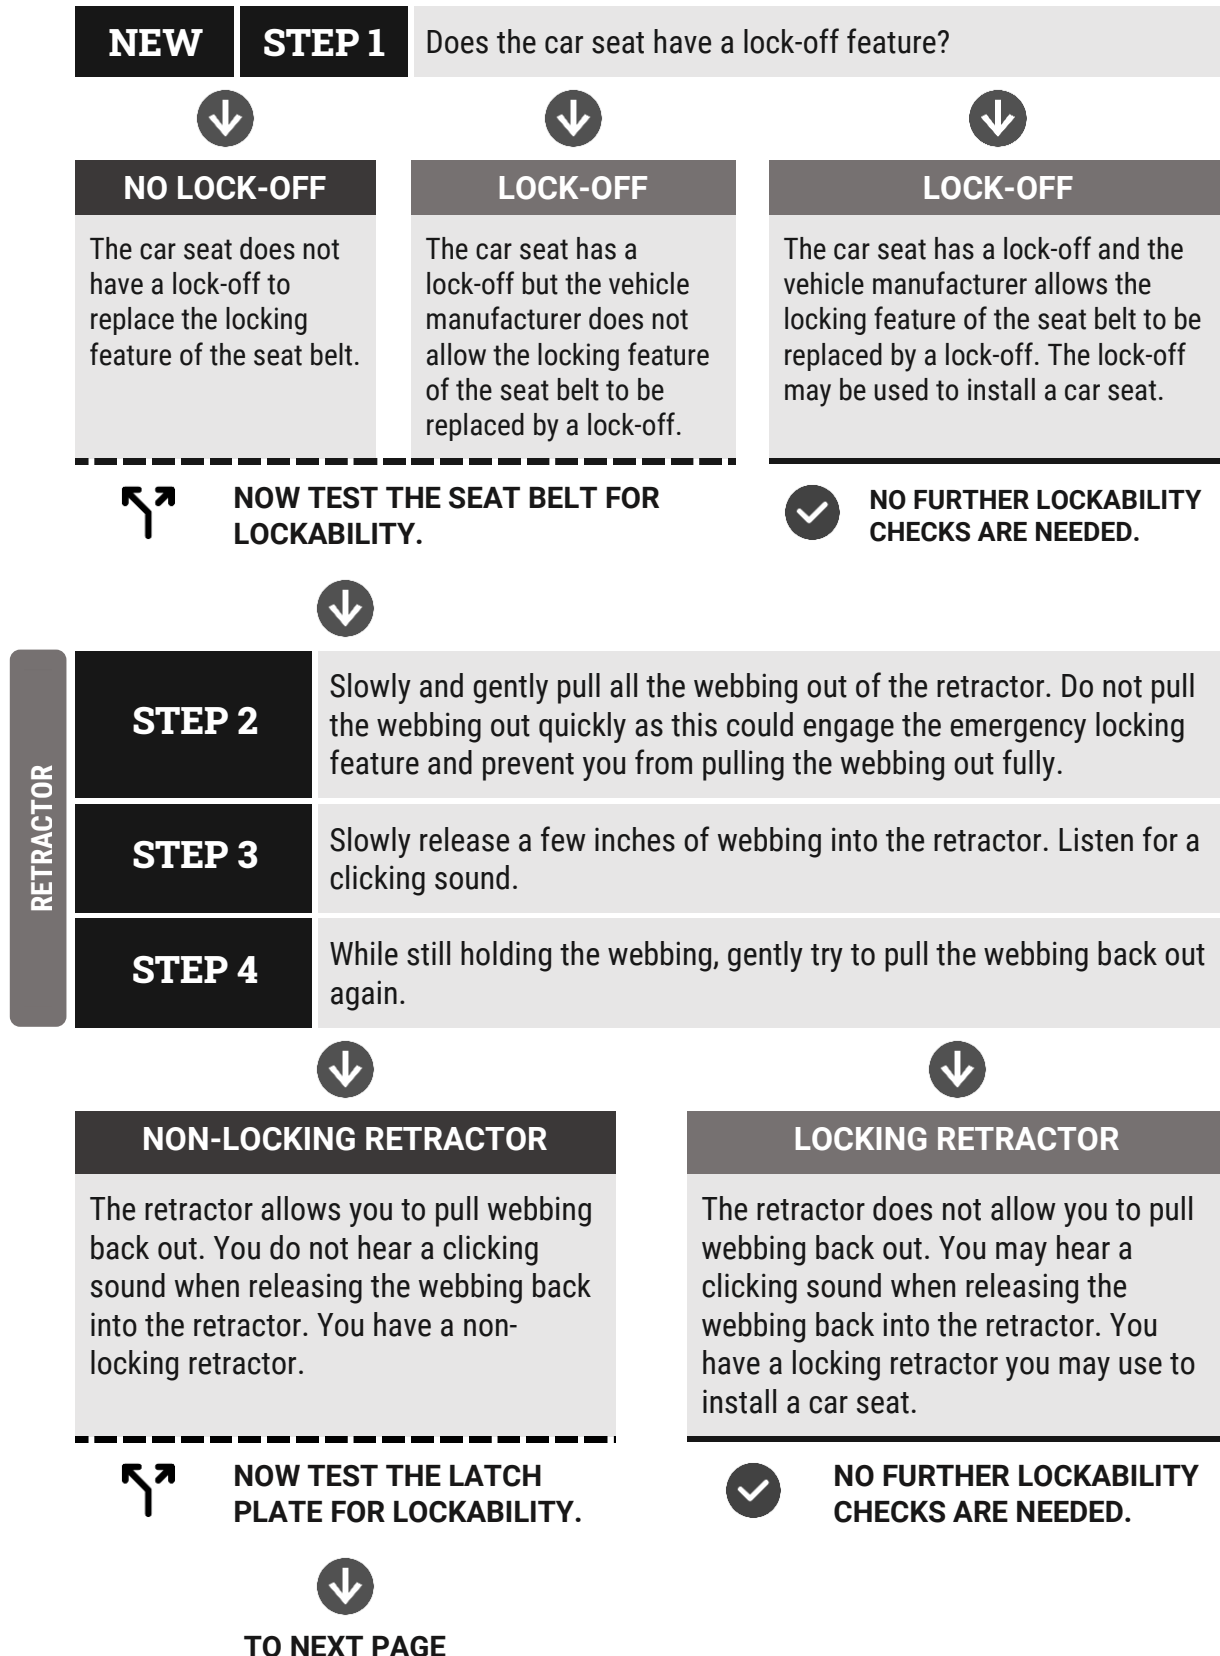

FROM PREVIOUS PAGE



LATCH PLATE

STEP 5

Buckle the seat belt.

STEP 6

Grasp the center of the lap belt. Pull firmly upward.

**NON-LOCKING LATCH PLATE**

The lap belt lengthens or slides through the latch plate. You have a non-locking latch plate.



**YOU MUST PROCEED WITH
ADDITIONAL APPROVED
BELT-LOCKING STEPS.**

**LOCKING LATCH PLATE**

The lap belt does not lengthen or slide through the latch plate. You have a locking latch plate you may use to install a car seat.



**NO FURTHER LOCKABILITY
CHECKS ARE NEEDED.**

**STEP 7**

If the seat belt is a lap-and-shoulder belt and the latch plate is not sewn-on, you may use a locking clip to install the car seat.



NO FURTHER LOCKABILITY CHECKS ARE NEEDED.