



E-Z-ON®
Adjustable Vest
Model #103Z
for School Buses

Zippers must always be in the back

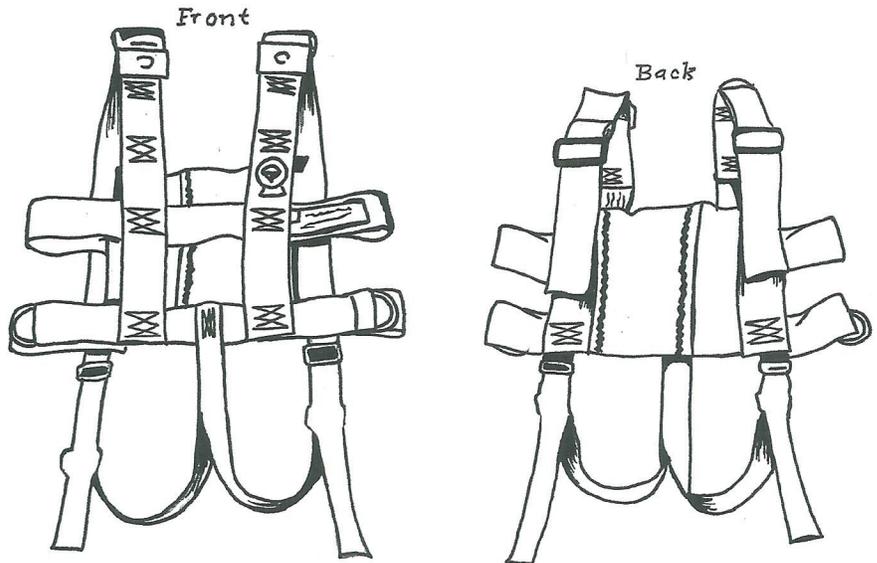

- 103Z Vests XXS-M come with crotch straps meeting NHTSA guidelines
- Meets FMVSS213 requirements
- **Use** for a passenger 20-168 lbs. only

Passengers seated behind occupants with the Seat Mount must be restrained with a seat belt or other restraint, or the seat be unoccupied.

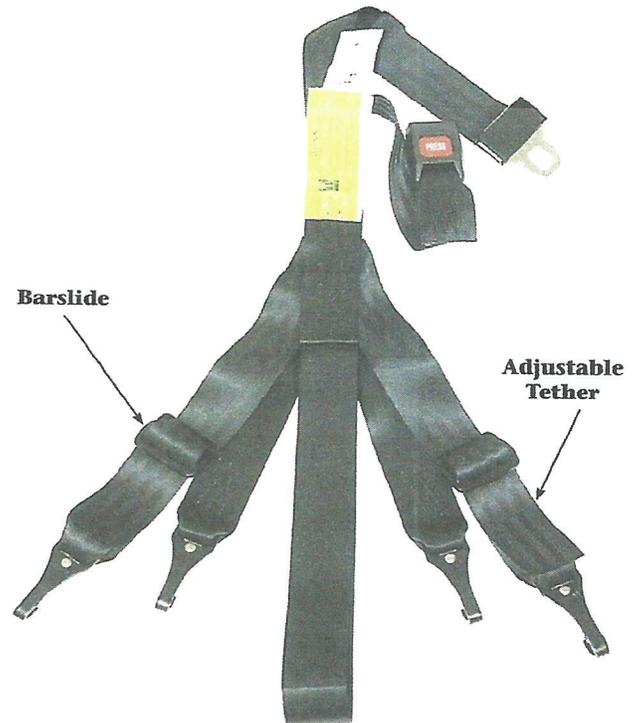

How to Register This Child Restraint

Child restraints could be recalled for safety reasons.

You must register this restraint in order to be notified of recall.

Fill out the REGISTRATION CARD enclosed with your E-Z-On® Vest, send your name address and the restraint model number and manufacturing date to the address below or log on to our website www.ezonpro.com and full out your product information via our registration page.

For recall information, call the U.S. Government Auto Safety Hotline at 1-800-424-9393. In the Washington D.C. area call 202-366-0123.



E-Z-ON®

Products, Inc. of Florida

605 Commerce Way West • Jupiter, Florida 33458

800.323.6598 • 561.747.6920 • Fax 561.747.8779



www.ezonpro.com

103Z with Seat Mount (Cam Wrap) Model #100S Installation for School Buses

INSTALLING THE SEAT MOUNT

Bus seats must have access between the bus seat cushion and seat back.

1. **Unlock** bus seat and lift up.
2. **Hang** the adjustable hook ends from the top of the bus seat.
3. **Wrap** the mount strap around the bus seat;
 - a. **lower** the push button strap over the back of the bus seat,
 - b. **place** the face of the push button against the bus seat back,
 - c. **wrap** the connector strap down and around seat frame to connect to the push button.
4. **Snap** the push button and connector together.
5. **Pull** webbing snug to create wrinkle and crease on bus seat top.
6. **Mount** strap must be snug without slack in the webbing.
7. **Allow** fixed hook ends to extend only 2" on bus seat
8. **Close** and **lock** bus seat.

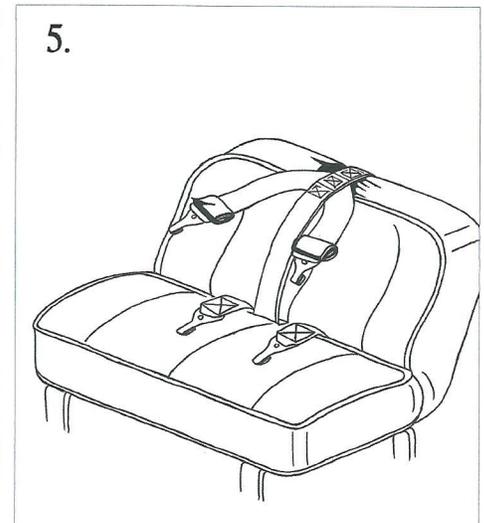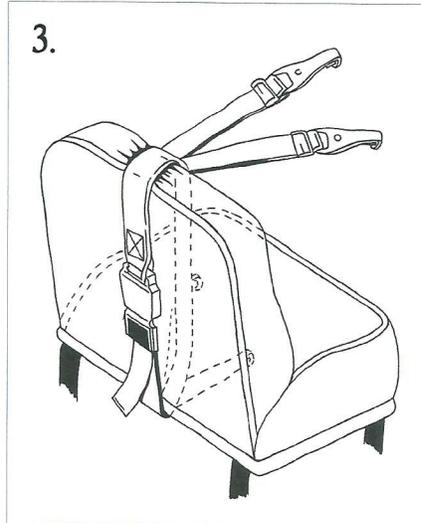

SECURING THE PASSENGER


Be sure the passenger:

- **has a properly fitted vest**
- **has all closures secure**
- **sits upright with buttocks against the bus seat back**

1. **Attach** non-adjustable E-Z-ON hook ends to the d-rings on the vest hip straps.
2. **Attach** adjustable hook ends to the shoulders of the vest tether slots on the adjusters (103Z)



3. **Correct** the length on the adjustable hook ends to secure the passenger. This allows the passenger to sit upright without leaning forward.
 - a. **Hold** the loose end, move the bar slide and hook to adjust to the correct length.
 - b. **Thread** the loose end back through the bar slide as shown.
 - c. **Push** the bar slide down against the metal hook
 - d. **Thread** the loose end back through the bar slide and pull the webbing snug.

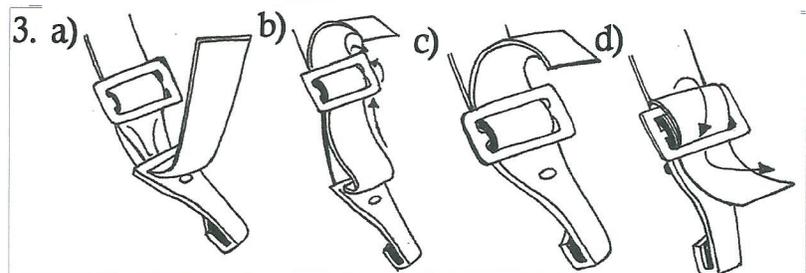

4. To adjust crotch strap, pull down
5. Be sure you follow all instructions on the vest and seat mount to secure the passenger

